


Cable # DCP      Power and Remote start

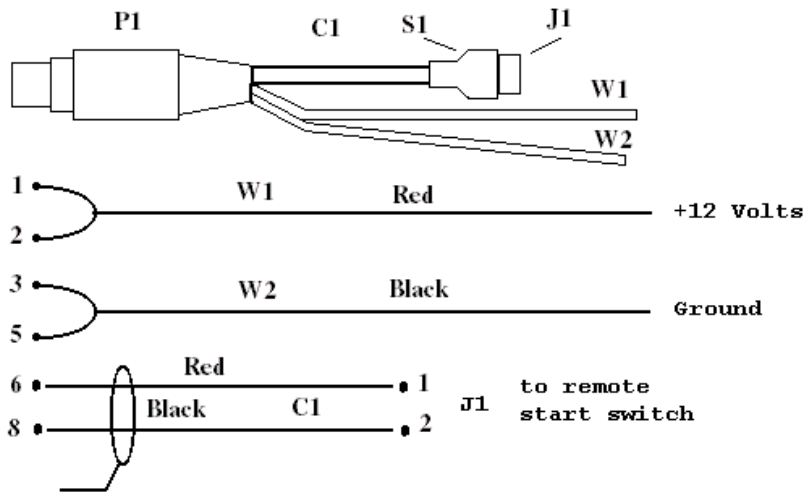

Connect the Red wire to power through a 1 amp fuse.  
 The remote start switch is a momentary switch. DO NOT connect the remote switch to power or ground.